
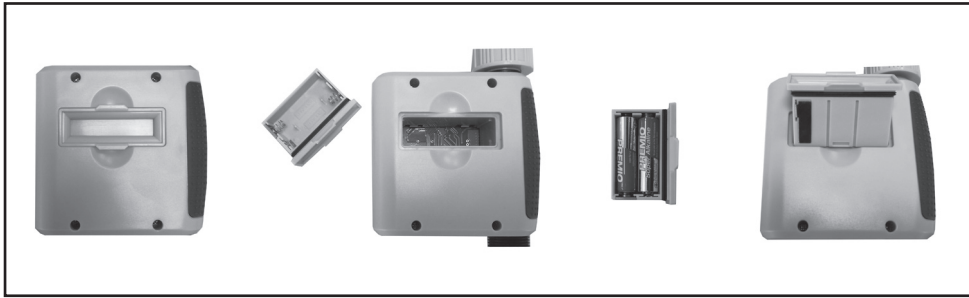


CTC075 - Solenoid valve - Hose end controller
CTC075 - Electrovanne - programmeur robinet
CTC075 - Programador de grifo - válvula solenoide
CTC075 - Programmatore con attacco a rubinetto - valvola solenoide

| | | | |
|---------------------|---------------|-----------------|----------|
| | 10 s - 7 days | | 3/4" BSP |
| | 5 s - 360 min | | 1" BSP |
| | 0 - 72 h | 0,5 bar - 8 bar | |
| | AUTO - MANUAL | | |
| 2x AA NOT INCLUDED | | | IP66 |

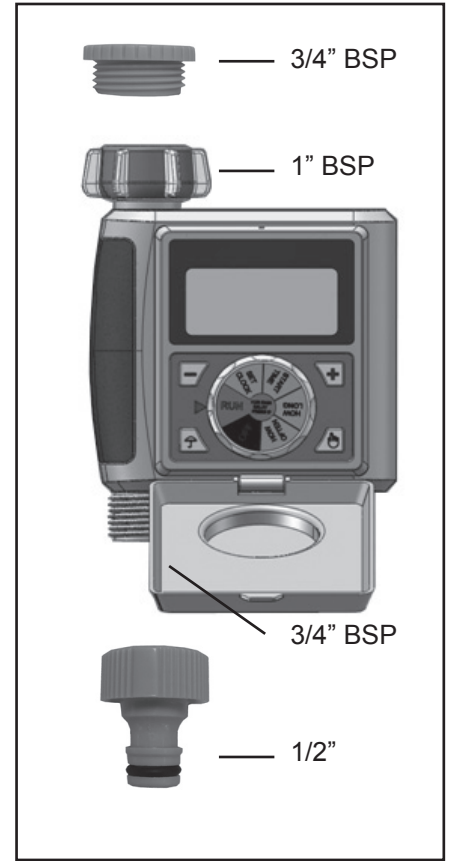

SET CLOCK
Réglage de l'horloge
Ajustes de reloj
Impostazione dell'orologio




START TIME
Heure de début
Hora de inicio
Ora di inizio

HOW LONG
Durée
Duración
Durata






0-5-10-15-20-25-30-35-40-45-50-55 s.
 1-2-3-...-360 min.

HOW OFTEN
Fréquence
Frecuencia
Frequenza

10-30 s.
 1-3-5 min.
 1-2-4-12 h.
 1-2-3-4-5-6-7 D

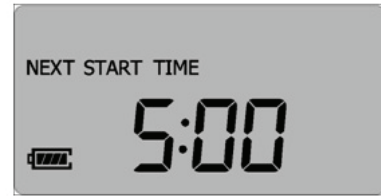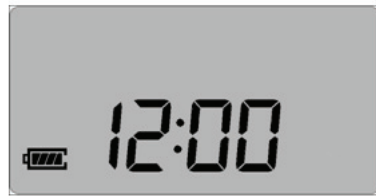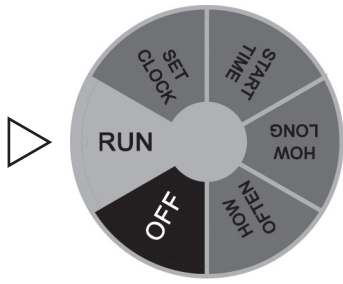

MANUAL
Manuel
Manual
Manuale

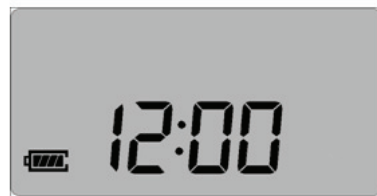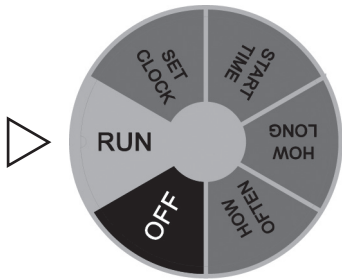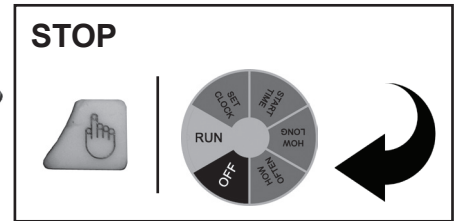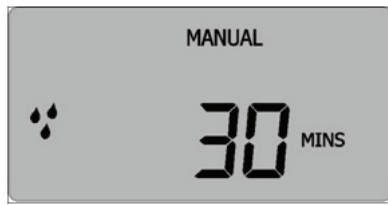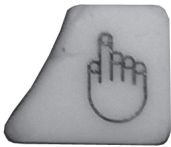

DELAY
Retard
Retrasar
Ritardo

